

TOTAL HOMEFX 800 SERIES

HDMI™

HIGH DEFINITION MULTIMEDIA INTERFACE

ANIMATED WINDOW DISPLAY KIT INSTRUCTION MANUAL


Please read the Instruction Manual carefully before operation.
***IF ANY COMPONENTS ARE MISSING OR DAMAGED, PLEASE CONTACT CUSTOMER SERVICE BEFORE CONTACTING THE RETAILER.**

Image System	TFT LCD	Color	24-bit RGB
Contrast Ratio	500:1	Keystone Correction	±15°
Native Resolution	1920x1080	Power Supply	12V
Lamp	30W LED	Power Consumption	35W
Lens	F=125	Media Input	USB/HDMI
Projection Distance	1M-4.8M	Sound Output	3.5mm earphone
Aspect Ratio	16:9/4:3	Menu Languages	English, Spanish, French, additional
Projection Size	25"~130"		




NO.	Definition	Purpose
1	Function Keys	Operating keys
2	HDMI Slot	Insert HDMI Source
3	Keystone Wheel	Adjust angle distortion
4	IR Receiver	Remote control signal receiver
5	USB Port	Insert USB
6	Power Input Port	Insert power supply adapter
7	3.5mm Earphone Port	Insert earphone or speaker
8	Lens Barrel	Adjust focus

Projector Components Projector Keys on Projector

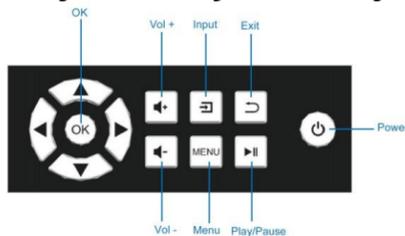

Remote Information

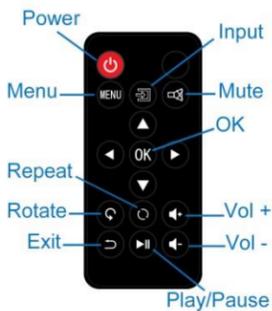

Power	Turns unit on/off
Menu	Brings up the Options/Sound/ and Picture Menu
Input	Changes your input sources
Mute	Mutes internal Speakers
OK	Accepts your selection
Repeat	Changes your settings to Repeat ALL, Repeat ONE, or Repeat OFF
Rotate	Mirrors images for Horizontal and Vertical formats
Exit	Exit current location to previous menu
VOL +	Turns Volume Up
VOL -	Turns Volume Down
Play/Pause	Play/ Pause videos

Note: Please remove batteries from remote for extended periods of inactivity.

Remarks

- The Total HomeFX kit is for indoor use only. Always operate in a dry environment.
 - For proper protection, please do not look directly into the lens during set up or operation.
 - During operation, please keep the lens at least 3 feet from fabrics, such as window curtains, furniture, or other flammable items.
 - Always operate in a ventilated area and do not block or cover the vents in the main housing.
 - Please only use the provided adapter and power cord with the projector. Failure to use these may create a fire hazard and may void any warranty.
 - For additional protection, please turn off the projector and remove the power supply when not in use.
 - Please use original supplied box and packing material when transporting.
 - Never open the projector housing. Only authorized personnel should be allowed access to the projector electronics.
 - For Adult use only. Not intended for the use by children under the age of 15.
 - Use only new, button cell battery (size CR2025) for the remote control.
 - To remove wrinkles in the projection material, use a low heat iron (on delicate or silk setting) and lay a cotton towel or cloth between the iron and the projection material. Do not make direct contact with the iron to the projection material. Never put the projection material in the dryer.
 - Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - If you find any operational defects, please do not attempt to repair. Unplug the projector immediately and call the Customer Service phone #: 1-888-476-7100
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

14. **WARNING:** Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with). This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose or recycle the battery according to municipal requirements.

Additional Operation Options

TIMER: After selecting the videos to be played, press the MENU button on the remote or the projector. Use the left or right arrow keys to cycle to the TIME menu. Select the number of minutes that the projector will play and then turn off. There is no Auto On function.

QUICK MENU: While the video is playing, press the OK button to access the Quick Menu. The Quick Menu includes further operational functions, such as Fast Forward, Rewind. There are also features to skip to the next video or to return to the previous video.

Supported File Formats

Multimedia Type	File Formats Supported
Video	AVI/FLV/MOV/MP4/MKV/RMVB

Projector Set Up

The Total HomeFX Projector is designed to project from the inside of your home onto windows for outside viewing or on a wall for inside viewing. Based on your viewing selection, either window or wall, arrange your setup accordingly.

For Window Projection: the projector should be placed within 4 to 8 feet from the window you will be using. Use the included projection screen material with the two-sided tape to attach to your window or window frame. Set up the Projector to your desired Orientation. For longer windows use the Horizontal Orientation. For taller windows, use Vertical Orientation (See Images Below). When the projector is on, if the screen seems tilted or trapezoidal, Turn the Keystone wheel to adjust and square the projected image. You can adjust the focus of the projection by rotating the lens barrel.



HORIZONTAL ORIENTATION



VERTICAL ORIENTATION

Projector Use

- Begin by connecting the power adapter to the projector. Connect the power adapter to the AC power outlet.
- Power on the projector by pressing the power button on the projector. The projector is now ON in active mode.
- Multimedia Screen will appear (Image 1) Insert the included USB into the projector fully
- When the Multimedia screen shows USB 2.0 at the bottom press OK. (Image 2)



Image 1



Image 2

- On the next menu, Highlight Videos and press OK (Image 3) select the orientation of the video to be projected, either horizontal or vertical. Select the orientation by highlighting the folder and pressing the OK button.

- On the next menu, select the season (Image 4) that you would like to play by highlighting the desired folder and pressing the OK button. The Pre-loaded files will appear (Image 5).
- To play all videos, press play on your remote or projector; to select specific videos, highlight the videos and press OK on your remote or projector and a small checkmark will appear. After a few seconds of non-activity, a small preview video will appear. To exit out of preview mode, simply move using the arrow keys. When your videos have been selected, press the PLAY/PAUSE button to bring the projections into full screen mode.

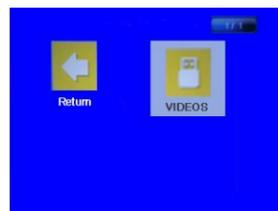


Image 3

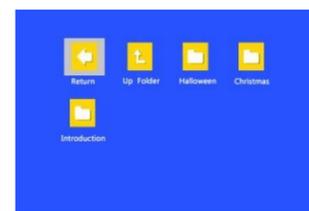


Image 4


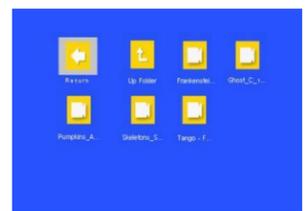


Image 5

HDMI Setup

- Press the Input/Source button on remote or projector and select HDMI. HDMI cable not included.

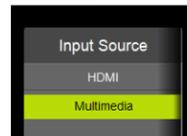

Projector does not support any Dolby soundtrack, so there will be no sound heard after HDMI cord is plugged in if the video has Dolby setting.



1-888-476-7100
610 Academy Drive
Northbrook, IL 60062
www.TotalHomeFX.com

Visit our website for more information, to purchase additional downloadable videos, and to submit a customer service request.
Please call for replacement accessories